

iPega®

 
角斗士之N-Switch版 产品说明书(PG-9136)

适用说明:

- 1.本产品适合操作N-Switch主机的单摇杆控制类游戏(例如 Mario系列、Street Fighter2等);
- 2.本产品即插即用,无需任何复杂操作,通过TYPE-C公头与N-Switch主机连接,控制主机的游戏操作;

★因官方游戏平台软件升级或源代码变更等不可抗拒的因素造成部分游戏无法与本产品连接操作,我公司不负任何责任。对此我公司保留最终解释权。

功能按键图示

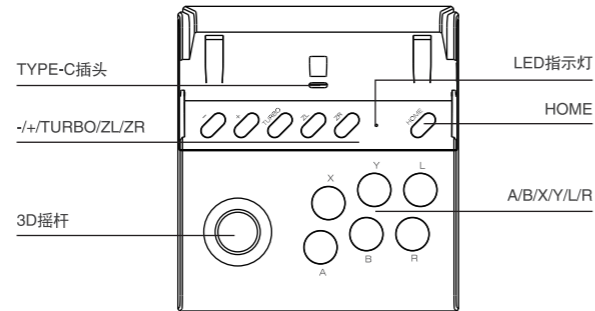

产品特性参数:

- 1.产品尺寸: L128*W139*H50mm;
- 2.产品重量: 170±5g;
- 3.工作电压/电流: DC5V/20mA;

产品使用说明:

- 1.在使用本产品之前,请确认N-switch主机的系统设置中,‘Pro手柄的有线连接’处于开启状态;
- 2.本产品功能操作简单,只需要将N-Switch主机插入产品对应卡槽,产品指示灯亮起,便可以控制N-Switch主机中的游戏操作!
- 3.产品的功能按键(+/-ZL/ZR/HOME/A/B/X/Y/L/R)对应N-Switch_pro或者joy-con手柄的按键功能;

 
TURBO功能:

- 1.动作键包括(A/B/X/Y/L/ZL/R/ZR) 8个按键,均可手动设置TURBO功能;
- 2.设置方式: 长按动作键,再轻按TURBO键开启,长按动作键,再轻按TURBO键, TURBO功能关闭;
- 3.产品休眠、关机重启后,之前设置Turbo功能自动清除,若启用TURBO功能时,必须重新设置;


注意事项:

- 1.请不要把本产品放在潮湿或高温地方存储;
- 2.不要敲击、摔打、棒打、刺穿,或试图去分解本产品,以免对产品造成不必要的损害;
- 3.非专业人员勿拆卸本产品,否则不在售后保修服务内;

产品清单:



产品主机 x 1

 

说明书 x 1

iPega 属于 PEGA LIMITED 所有。

专利号: ZL201930023752.3

iPega®


Gladiator-Switch Edition User's Manual (PG-9136)

Scope of application:

1. This product is suitable for playing games using N-Switch console with single stick (such as Mario series, Street Fighter 2, etc.);
2. This product is plug-and-play type, requiring no complex operation, which is connected to the N-Switch console via the TYPE-C male to control the game console;

★Some games cannot be played with this product due to external factors, such as official software upgrades or source code changes in game platform, for which our company shall not be held liable. The scope of application is subject to our final interpretation.

 Illustration of buttons

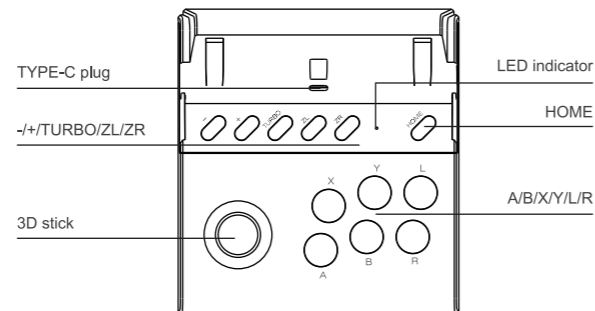

Characteristic parameters:

1. Size: L128*W139*H50mm;
2. Weight: 170±5g;
3. Working voltage/current: DC5V/20mA;

Operation instructions:

1. Before using this product, please confirm the pro-controller wired communication is on in N-Switch system settings.
2. This product is operator-friendly. Connect it with the N-Switch console via the corresponding port, and the indicator will be on, when you can control and play the games in the N-Switch console!
3. The roles of buttons (+/-ZL/ZR/HOME/A/B/X/Y/L/R) are corresponds to those of N-Switch_pro or joy-con stick;

 
TURBO:

1. There are 8 action buttons (A/B/X/Y/L/ZL/R/ZR), all of which can be manually set to TURBO mode;
2. Setting method: Hold down the action buttons, and then press the TURBO button gently to enable the TURBO mode; hold down the action buttons, then tap the TURBO button to disable the TURBO mode;
3. After the product is hibernated, shut down and restarted, the Turbo mode is automatically disabled before setting. To enable the TURBO mode, reset the product;


Notes:

1. Please do not store this product in wet or high-temperature areas.
2. Don't knap, beat, drub, pierce, or try to decompose this product, to avoid unnecessary damage to the product.
3. Non professional personnel should not disassemble the product, otherwise it will not be covered in the after-sales warranty service.

Accessories List



Console x1

 

User Manual x1

iPega and ePega trademarks all belong to PEGA LIMITED.

Patent NO.: ZL201930023752.3