


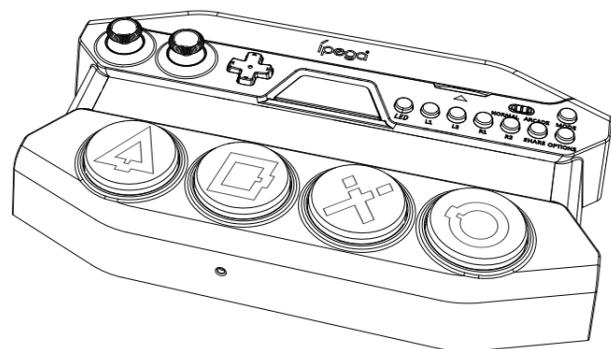

艾派格

# 初音天使游戏控制器


产品说明书(PG-P4016)



售后客服QQ群: 837350687  
客服电话: (0755) 2791 8998  
在线时间: 周一至周五9:30-17:30

ipega官方微信公众号

## 产品外观图示

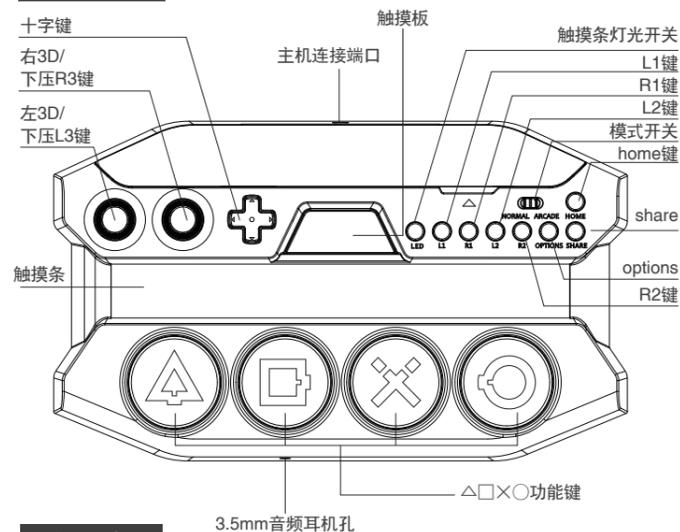


## 产品特点:

1. 产品主要适用于P4/P4 slim/P4 Pro主机, 兼容P5游戏主机, 主要适用玩P4音乐游戏(如: 初音未来 歌姬计划Project DIVA Future Tone DX, 初音未来 Project DIVA X HD)。
2. 本产品即插即用, 通过USB数据线与P5/ P4/ P4 slim/P4 Pro主机连接, 控制主机的游戏操作;
3. 产品触摸条带有蓝色LED灯, 当手指触摸时会跟随发光。
4. 结构符合人体工程学, 手感舒适。
5. 支持PC USB在线升级产品程序, 从而适应最新的软硬件更新, 可有效避免因主机升级系统而导致产品无法使用的难题。
6. 翻盖内配备Type-C充电插头, 可在玩游戏时给Type-C接口的安卓手机或其它电子设备充电。

## 产品使用说明:

### 连接主机:

 用附带的USB数据线一端连接游戏主机的USB端口, 另一端连接产品背部的USB接口即可。(注意: 连接过程中请勿操作触摸板, 否则可能会造成误动作, 需重新连接。




### 模式设置:

正常模式:

1. 将模式开关拨到NORMAL NORMAL ARCADE 位置;
2. 触摸条模拟为左右3D摇杆功能, 触摸条将分为左右各一半的区域;

模拟左3D摇杆区域 模拟右3D摇杆区域

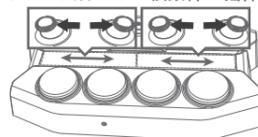

游戏专用模式:

1. 将模式切换开关切换到ARCADE NORMAL ARCADE 位置, 此模式适合玩: 初音未来 歌姬计划 Project DIVA Future Tone DX;

### 游戏设置:

1. 在进入游戏后在主菜单页面选择自定义。
2. 选择游戏·操作设定。
3. 将动态感测功能打开选择ON。
4. 在使用本产品前, 建议选择游戏主菜单的“自定义”→游戏操作设置→更改为⑤ Δ□XO;




## 产品技术参数:

工作电压: DC5V; 工作电流: <320mA;  
线长: 3米

## 注意事项:

1. 请不要把本产品在潮湿或高温地方存储。
2. 不要敲击、摔打、刺穿、或试图去分解本产品, 以免对产品造成不必要的损害。
3. 非专业人员误拆卸本产品, 否则不在售后保修服务内。
4. 因官方软件升级或源代码变更等不可抗拒的因素造成部分游戏无法与本产品连接操作, 我公司不负任何责任。 对此我公司保留最终解释权;

## 产品清单:

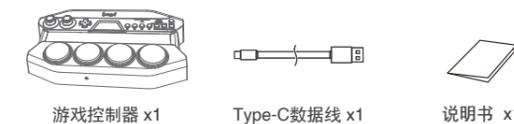

游戏控制器 x1

Type-C数据线 x1


说明书 x1

专利号: ZL202030262640.6




# WIRED CONTROLLER FOR HATSUNE MIKU

User Manual (PG-P4016)

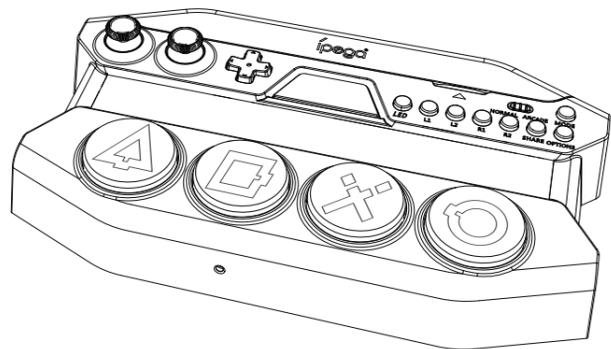

## Function Button:

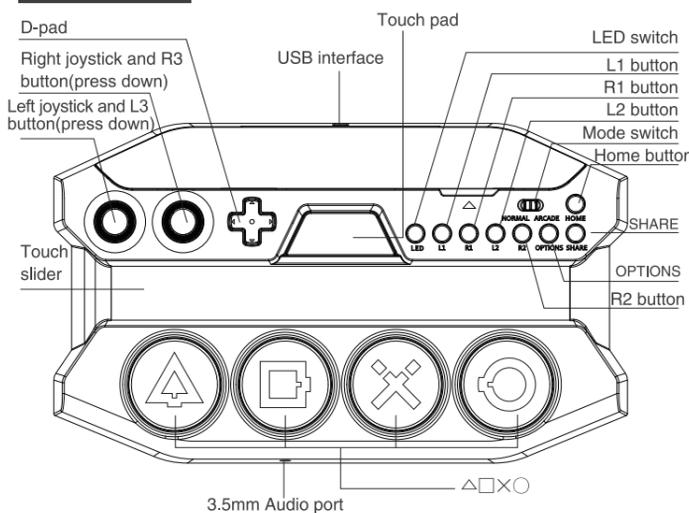


## Product Application:

1. Compatible with P4/P4 slim/P4 Pro/P5 console, mainly suitable for playing P4 music games (such as: Hatsune Miku, Project DIVA Future Tone DX, Hatsune Miku Project DIVA X HD)
2. Plug & Play, connect to the P5/ P4/ P4 slim/P4 Pro console by using a USB cable for gaming operation.
3. The "Touch Slider" with blue LED light which will follow the finger movement while touching.
4. With ergonomic design, bring better hand feeling.
5. Support online upgrade by using PC, suitable for latest software and hardware updates, to avoid product to be unusable while the console upgrade the system.
6. With a Type-C charging port hide in front flap which can charge Type-C Android phones or other devices when playing games.

## How to use:

### How Connect the console:

 Connect this product to the console by using a Type-C USB Cable. (Note: DON'T touch the touchpad during the connection process, otherwise it may cause malfunctions.)




### Mode setting:

Normal Mode:

1. Setting the mode switch to NORMAL NORMAL ARCADE ;
2. Simulation is left and right 3D joystick function, touch slider will be divided into left and right areas;

Left Joystick Area Right Joystick Area

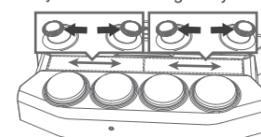

ARCADE mode:

1. Mode switch change to ARCADE mode NORMAL ARCADE . this mode is suitable for playing: Hatsune Miku Diva Project DIVA Future Tone DX;

### Game setting:

1. After entering the game, select "Customize" on the menu.
2. Select game and operation settings.
3. Turn on the MOTION SENSOR function and select ON.
4. Before using this product, it is recommended to select the Melody icon "Customize"→Game Operation Settings→Change to ⑤ Δ□XO;




## Electrical Parameters:

Working voltage: DC5V; Working current: <320mA;  
Cable Length: 3 m

## Notes:

1. Do not store product in humid or high temperature places;
2. Do not knock, beat, puncture, or try to disassemble to avoid unnecessary damage to the product;
3. Non-professionals disassemble this product by mistake otherwise it will not be cover by the after-sales warranty service;
4. Our company is not responsible for the failure of some games to connect with this product due to irresistible factors such as software upgrade or source code change of the official game platform. Our company reserves the right of final explanation.

## Included:

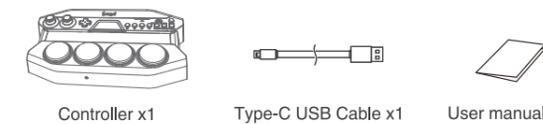

Controller x1

Type-C USB Cable x1

User manual x1

Patent number: ZL202030262640.6