PG-9191说明书 70G书写纸双面印刷/单色印刷 尺寸：105x142mm

手机版猫王双摇杆无线手柄

产品说明书(PG-9191)中文版

产品适用说明:

1.产品支持直连直玩，无需多余的游戏平台和复杂的设置与激活操作（支持安卓6.0以上，iOS11.0-13.3.1系统）。
2.产品适用于Android/IOS手机平板，系统上无线连接时,进行游戏操作时使用。有线连接支持N-S/P3/安卓及电脑(Win 7以上系统)设备上的游戏。
3. 产品支持边玩边充电，提高用户体验感。
4.构符合人体工程学,手感舒适。

★因官方游戏平台软件升级或源代码变更等不可抗拒的因素造成部分游戏无法与本产品连接操作，我公司不负任何责任。
对此我公司保留最终解释权。
技术支持QQ群: 837350687
客服电话：0755-2791 8998
在线时间：周一至周五9:30-17:30

ipega官方微信公众号
(关注微信号 下载游戏大厅)

功能按键图示

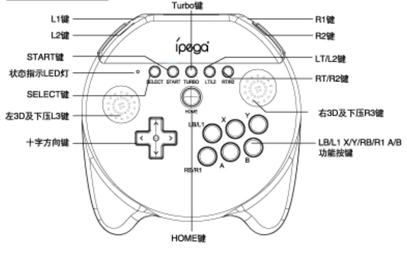

产品特性参数:

1.工作电压：DC3.7V
2.工作电流：<30mA
3.静态电流：<15uA
4.持续使用时间：≤12H
5.输入电压/电流：DC5V/500mA
6.充电时间：约3小时
7.BT 5.0，传输距离：≤8M
8.电池容量：400mAh
9.待机时间：满电放置30天

摇杆球使用方法:

1.从手柄底部将摇杆球逆时针转出来，如下图箭头。

2.当玩街机游戏的时候，可将背后摇杆球拧入左侧摇杆帽上，进行游戏。
（注：摇杆球只能装在左侧，右侧不能装）

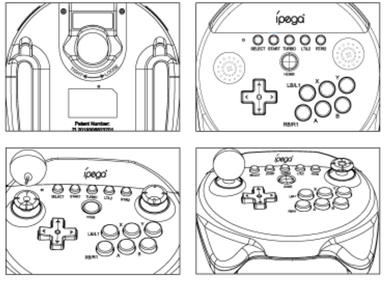

产品使用说明:

安卓V3 模式:

关机状态下,同时按A+HOME键2秒,手柄红灯快闪进入(安卓)V3配对模式，当安卓手机/平板搜索到＂PG-9191＂设备名时，选择点击连接，连接成功后手柄LED灯常亮，已成功连接过，可以直接按HOME键，LED灯慢闪，自动回连。

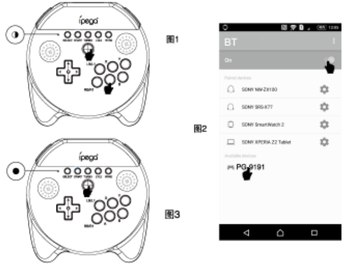

IOS V3 模式:

关机状态下,同时按Y+HOME键2秒,手柄红灯快闪进入(IOS)V3配对模式，当苹果手机/平板搜索到＂PG-9191＂设备名时，选择点击连接，连接成功后手柄LED灯常亮，已成功连接过，可以直接按HOME键，LED灯慢闪，自动回连。

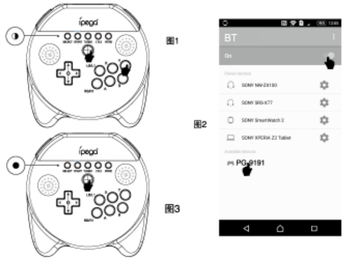

安卓/IOS直玩按键映射功能:

关注公众号（＂ShootingPlus＂），查看公众号内的默认操作说明。如需设置映射键位，请下载安装＂ShootingPlus V3＂APP，在APP内进行按键映射以及调整按键位。

ShootingPlus微信公众号
(关注微信号 下载ShootingPlus app)

安卓标准游戏模式:

同时按X+HOME键2秒进入安卓标准游戏配对模式，手柄LED灯快闪，当安卓手机/安卓平板/安卓智能电视搜索到＂PG-9191＂设备名时，选择连接。连接成功后，手柄LED灯常亮，已成功连接过，可以直接按HOME键，LED灯慢闪，自动回连。

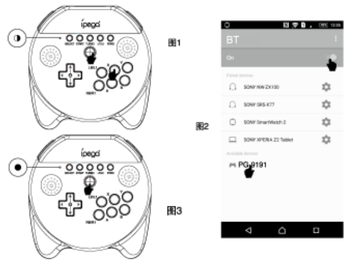

有线连接模式:

（有线连接到 PC/P3主机/智能电视/电视盒子/ N.S主机）
在手柄关机状态下，长按手柄右上方边沿的＂R1键＂然后插入USB线手柄红灯闪烁配对模式中，连接成功后，手柄LED灯常亮，PC默认为X-input 360模式，按住SELECT+START 3秒切换D-input 模式，左马达启动键有：LT/L2和L2；右马达启动键有：RT/R2和R2。

TURBO功能:

1. 动作键包括(A/B/X/Y/L1/L2/R1/R2)八个按键，均可手动设置TURBO功能。
2. 设置方式：长按动作键，再轻按TURBO 键开启，长按动作键，再轻按TURBO键，TURBO功能关闭 。
3. 产品休眠、关机、重启手柄后，之前设置TURBO功能自动清除，若启用TURBO功能，必须重新设置。

手柄充电/休眠/唤醒/关机功能:

1.手柄充电功能:
a.低电时，LED指示灯每快闪3S停1S提示以区分配对方式灯闪。
b.充电时，LED指示灯慢闪提示:
c.充满时，LED指示灯长亮提示:
2.手柄休眠/唤醒/关机功能:
a.BT摇台在5分钟内无任何按键操作时自动关机休眠:
b.当需要重新使用时需按HOME键唤醒即可回连:
c.在开机状态下，长按HOME键3秒，产品关机，LED指示灯熄灭。

注意事项:

1. 请不要把本产品在潮湿或高温地方存储。
2. 不要敲击、摔打、刺穿、或试图去分解本产品，以免对产品造成不必要的损害。
3. 非专业人员误拆卸本产品,否则不在售后保修服务内。
4. 摇杆球顺时针拧入3D帽时，拧到底即可，切勿强行用力而损坏3D摇杆。
5. 因官方软件升级或源代码变更等不可抗拒的因素造成部分游戏无法与本产品连接操作，我公司不负任何责任。对此我公司保留最终解释权。

产品清单:



猫王无线手柄 x1　说明书 x1　Type-C线 x1　硅胶帽 x2　摇杆球 x1

iPega属于PEGA LIMITED所有.

专利号: 2019306823701

Elvis Wireless Controller

User Manual(PG-9191)

Application Introduction:

1.The product supports direct connection and direct play, no need for redundant game platforms and complicated settings and activation operations(Support Android 6.0 or above, iOS 11.0-13.3.1).
2.The product is suitable for Android/iOS mobile phones and tablets, Wireless connection,operate while play games,Wired connection supports N-S/P3/Games on Android and computer (Win 7 and above) devices.
3. The product supports charging while playing to improve user experience.
4.Ergonomics design,feels comfortable.

Instruction for key function:

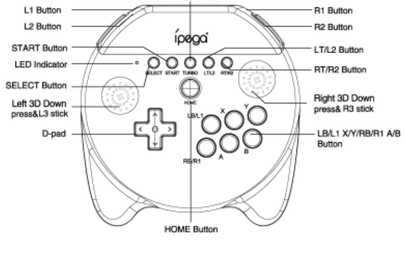

Electrical Parameter:

1.Working voltage: DC3.7V
2.Working current: <30mA
3. Static current : <15uA
4.Working time：≤ 12H
5.Input voltage/ current: DC5V/500mA
6.Charging time：about 3 hours
7.BT 5.0 transmission distance: ≤ 8M
8.Battery capacity: 400mAh
9.Standby time: up to 30days once fully charged

Usage of Silicone Joystick Cap :

1.Turn the Joyctick cap counterclockwise from the bottom of the controller, as arrow are shown below.

2. When playing arcade games, you can screw the joystick cap into the left 3D joystick to playing. (Note: The joystick cap can only be install on the left side.)

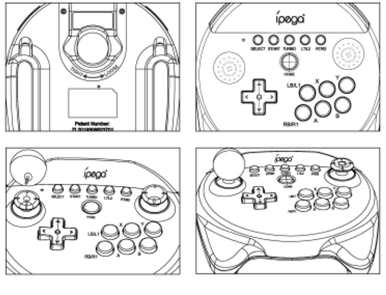

Operation instructions:

Android V3 mode:

Press A+HOME buttons for 2seconds to enter V3 direct-play mode(Android),Red LED indicator will flash quickly,seach "PG-9191" on device and pair,when connected successfully, LED indicator will be always on. When gamepad is already connected, you can press the HOME button to reconnect automatically, and LED indicator will flash slowly.

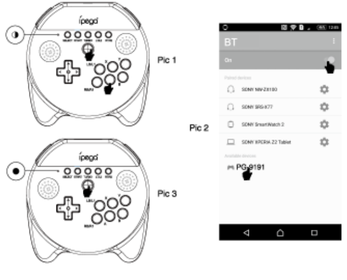

IOS V3 mode:

Press Y+HOME buttons for3 seconds to enter V3 direct-play mode(Ios), LED indicator will flash quickly, search "PG-9191" on device and pair,when connected successfully, LED indicator will be always on. When gamepad is already connected, you can press the HOME button to reconnect automatically, and LED indicator will flash slowly.

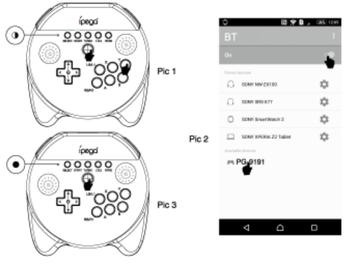

Android/IOS button mapping for direct-play mode:

Search "ShootingPlus" in the Apple App Store/Google Play Store, download and install the "ShootingPlus V3" app;

ShootingPlus V3

Android HID game mode:

Press X+HOME buttons for 2 seconds to enter Android standard game mode,seach "PG-9191" on Android device and pair, after connected successfully,LED indicator will be always on. When gamepad is already connected, you can press the HOME button to reconnect automatically, and LED indicator will flash slowly.

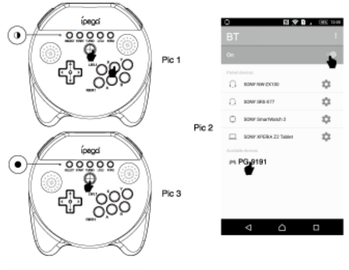

Wired connection mode:

Wired connection to PC/P3 host/smart TV/TV box/N.S host
When the handle is turned off, press and hold the "R1 button" on the upper right edge of the handle, and then insert the USB cable and the handle is flashing in red light pairing mode After the connection is successful, the handle LED light is always on, the PC defaults to X-input 360 mode, press and hold SELECT+START for 3 seconds to switch In D-input mode, the left motor start keys are: LT/L2 and L2; the right motor start keys are: RT/R2 and R2.

TURBO Function:

a. Action buttons include (A/B/X/Y/L1/L2/R1/R2), any of the action buttons can be set manually with TURBO function.
b. Setting method: Press and hold down one of action buttons, and then press the TURBO button to enable the TURBO function; hold down the action button, then press CLEAR button to cancel the TURBO function.
c. When gamepad is power off, shut down or restarted, the Turbo function is automatically cleared. To enable the TURBO mode, you need to reset it.

Charging/sleeping/wake up/shut down gamepad:

1.Charging
a.When lower power, LED indicator flashes every 3S and stops 1S to indicate the pairing mode.
b.When being charged, LED will indicate to flash slowly.
c.When being fully charged, LED indicator will be always on.
2.Gamepad sleep/wake up/ shut down function:
a.The gamepad will be automatically shut down and enter sleep mode if without operation in 5 min;
b.To restart operation, you need to press the HOME button to reconnect it;
c.When it is turned on, press HOME button for 3 seconds to turn it off, and all the LED indicators will be off;

Notes:

1.Please do not store this product in wet or high-temperture areas.
2.Don't kanp, beat, drub, or try to decompose this product, to avoid unnecessary damage to the product.
3.Non-professional personnel should not disassemble the product, otherwise it will not be covered in the after-sales warranty service.
4. When the rocker ball is screwed into the 3D cap clockwise, just screw it to the end. Do not use force to damage the 3D rocker.
5.Due to the official game platform software upgrade or source code changes and other not resist factors caused of some games can not be played or connected with the gamepad. Our company has no responsibility, we reserves the right of final interpretation for this.

Accessories List:



Elvis wireless Controller x1　use manual x1　Type-C cable x1　Silicone Capx2　Rocker capx1

iPega and ePega trademarks all belong to PEGA LIMITED.

Patent NO.: 2019306823701